


AD-1681(Ni-Cd battery pack) Instructions

Notes to users

- 1 Avoid shorting the battery, or wrapping it with a conductive material, which will cause the battery to heat up. Do not spill water or other liquids on this pack as it may cause damage to the pack or the batteries.
 - 2 Do not modify this battery pack or use it for other than it's intended purposes.
 - 3 Use only the AC adapter supplied to charge the battery.
 - 4 This battery pack is not charged when shipped. Charge the battery pack fully before use.
 - 5 A charging temperature lower than +10°C(50°F) or higher than +30°C(86°F) may cause the battery to be overcharged or not fully charged.
 - 6 Do not charge the battery for more than 16 hours as it may be damaged.
 - 7 Do not leave the battery in a discharged state for long periods of time, this may damage the battery.
 - 8 Do not attempt to charge a fully-charged battery as it may be damaged.
- Charge the battery when the sign "the battery needs charging" appears on the display of the equipment's in use.

Out of the box

Please check the box for the following items:

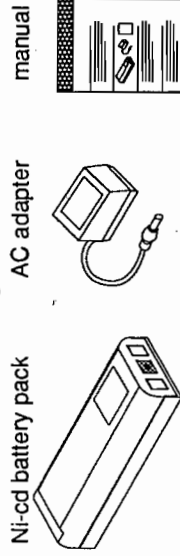

Specifications

Nominal capacity	600mAh
Nominal voltage	7.2V
Temperature during use	-10°C to +40°C (14°F to 104°F)
charging	+10°C to +30°C (50°F to 86°F)
Charging period	16 hours maximum (The charging time may vary dependent on the temperature and use)
Life characteristics with cyclic use	Apx.300 cycles (When the battery is charged and discharged repeatedly)
Weight	Apx.220g (Battery pack only.)

Charging

